



Parking Alert Signs

Engineered safety systems for you parking facilities

www.passsigns.com 480-689-1993 support@passsigns.com

Quick Sheet CAR COMING 4010 Exit Warning Sign

Part Number: CC4010VW2

2-sided Vehicle Exiting Warning System

Input Power: 100VAC to 240VAC or (12VDC)



Power requirement: 1A or (5A)

Color : Copper vein powder coating


Size: 40"H x 10"W x 7"D

Used to warn pedestrians and street traffic of cars exiting alleys and parking garages.

CC4010VW2-KIT	Primary sign with LEDs, PSC Intelligent controller, Audio module, Audio cut-off timer, Speaker, & Power supply
CC4010VW2-BASIC	Secondary sign, LEDs & Speaker only for exits wider than 25'
SAL1818HW	Stop and Look 18"x18" sign, warns drivers exiting parking garage to stop and look before exiting
PS-VMD-DL	Vehicle Motion Detector, intelligent motion detector that detects direction and senses if the motion is from a pedestrian or vehicle

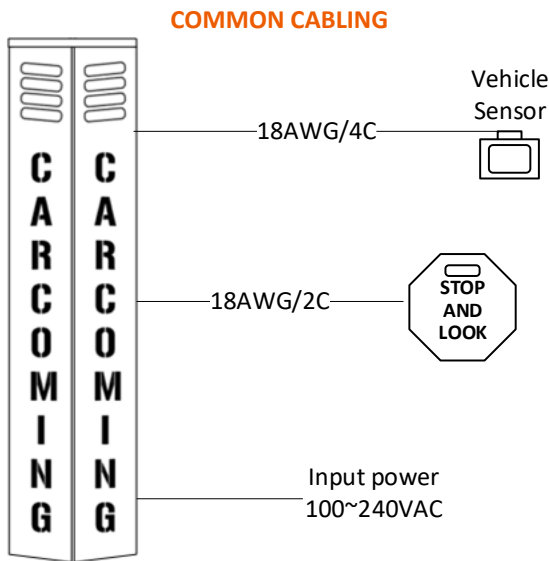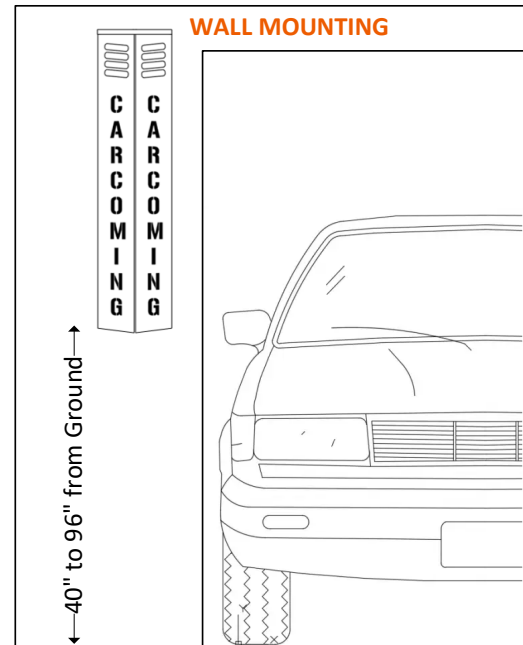

◀ Ideally Sign should be visible from 50' in either direction ▶

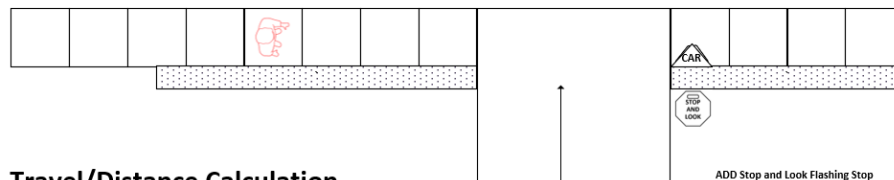



Travel/Distance Calculation

SPEED ft/sec DtoE/ft


5	8	25
10	15	50
15	22	75
20	30	100

ft/sec: Vehicle travel in feet per second
DtoE/ft: Distance detection to exit in feet


DEVICE PLACEMENT

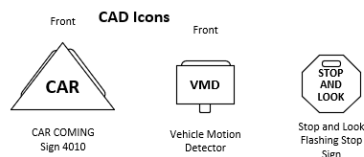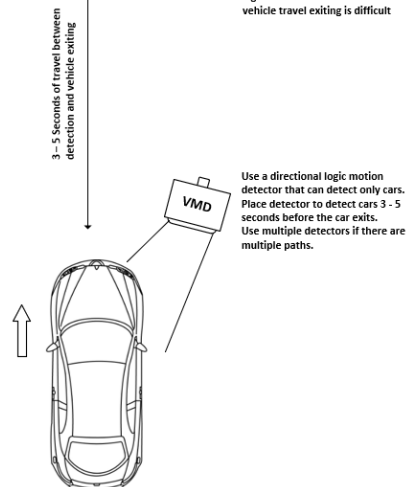

Opening the sign and mounting

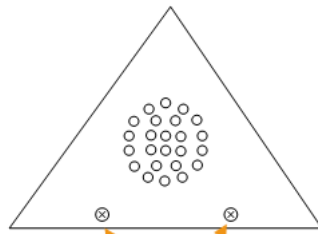

Remove (2) 1/4"-20 screws.

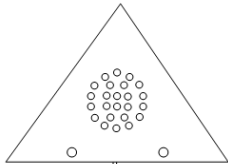


If cover is tight then place a flathead screwdriver between front cover and back plate at the bottom of the sign and pry slowly.


Slide front cover off back plate.




Wing Nuts

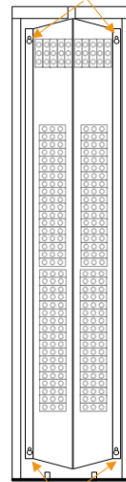

Remove the (4) Wing Nuts on holding the internal plate to the back plate. Set the internal electronics plate in a safe area.

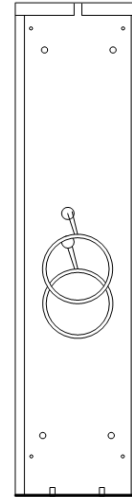

Mount your back plate to the wall using (4) anchors and bring wire through.

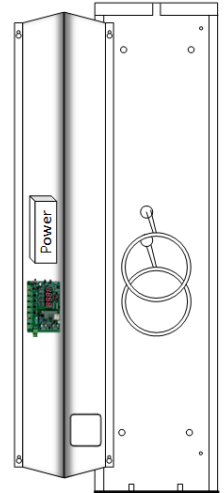

Use the internal plate angle hinge and two Wing Nuts to allow you to hold the internal plate in place while wiring the Controller and Power Supply.

PSC common terminations

