

Config Switches

Activation Duration - How long the sign activates when triggered. Typical is 10 seconds.

| Switch | On | Switch | ON |
|--------|---------|--------|---------|
| 1 | 5 secs | 1, 3 | 25 secs |
| 2 | 10 secs | 2,3 | 30 secs |
| 1,2 | 15 secs | 1,2,3 | 35 secs |
| 3 | 20 secs | | |

Delay Duration - Delay time before the Activation Duration starts. Default is 0, SW 4&5 off

| Switch | On | Switch | ON |
|--------|---------|--------|---------|
| | 0 secs | 5 | 10 secs |
| 4 | 10 secs | 4,5 | 15 secs |

Board Operations - How the board functions. Default is

Normal Operations, SW 6&7 off

| Switch | On | |
|--------|------------------------------|--|
| | Normal Operations | |
| 6 | Directional Logic Operations | |
| 7 | 2 Inputs - 2 Outputs | |
| 6,7 | 2-Way Traffic Controller | |

2nd Trigger Restart - How the board functions.

| Switch | On | |
|--------|---|--|
| | Normal Operations | |
| 8 | 2nd Trigger will reset Activation Timer | |

